


MY FAVORITE TOOLS—JIGS—FIXTURES

UNIVERSAL CLARINET & BASSOON CADDY

by Lars Kimser

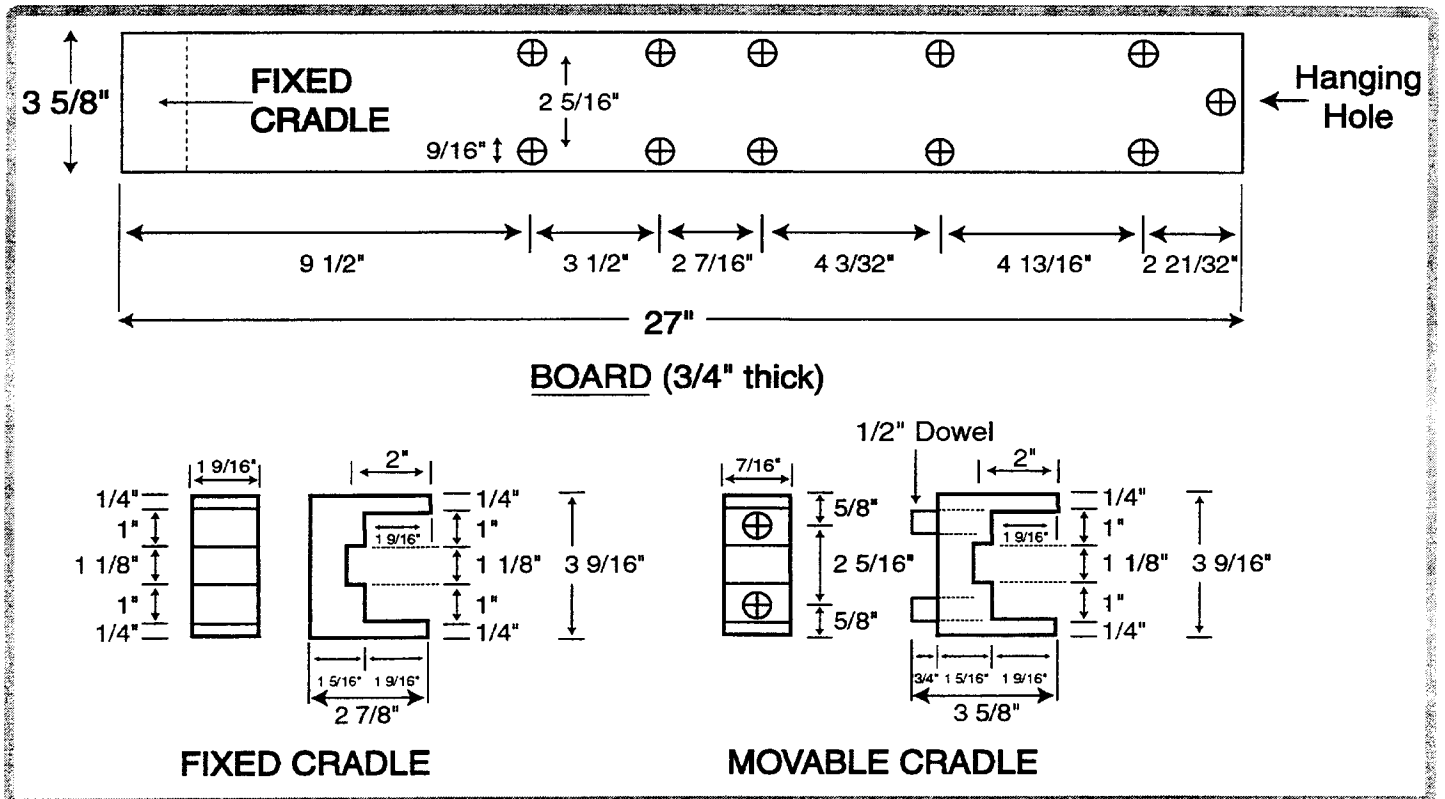

MATERIALS:

- 6" of 2" x 4" Pine
- 27" of 1" x 4" Pine
- 4" of 7/16" Dowel
- 12" x 12" of Sheet Felt

DIRECTIONS:

- 1) Cut the board to prescribed dimensions.
- 2) Locate and drill all 11 holes in board.
- 3) Cut the 2 cradles to dimensions.
- 4) Drill the dowel holes in the bottom of 1 cradle.
- 5) Install the 1/2" dowels in these 2 holes (make them long enough so that they will exceed the cradle by 3/4").
- 6) Glue sheet felt to the inner surfaces of the cradles with contact cement.
- 7) Glue the Fixed Cradle to end of board as prescribed.
- 8) Finish the surface as desired.
- 9) Cover the bottom side of board with sheet felt.

